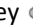 
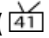 
 




 
 

 
### Before the Start of Class:

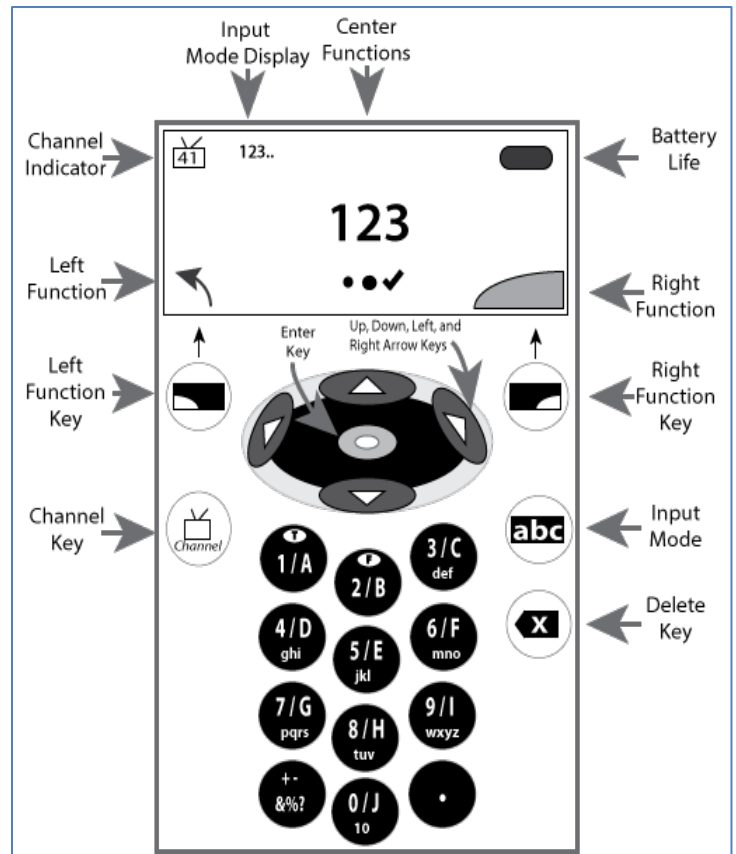 
1. Press the central Enter Key  to turn on your clicker.
2. Verify that you are on the correct Channel ( on upper left). If not, please enter the correct channel by pressing the Channel Key followed by the Number.

### Responding to Questions during Class:

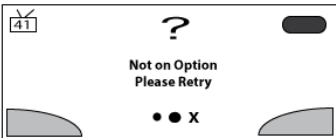 

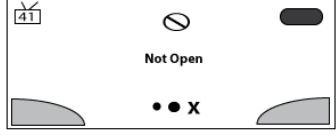 
1. When the Instructor asks a question, the Response NXT® (clicker device) will prompt you to enter the proper response type to that question. (See **Question and Response Types** box below)
2. After you agree to send your response, the display will show the Response NXT® sending the message .
3. After the Instructor receives your response, the display will show that the message has been sent .

### Question and Response Types:

| Input Mode     | Question and Response Type                                                                                                     | Comments                                                                                                                                                                                   |
|----------------|--------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                | Multiple Choice, Single Response<br>        | Once the selection is made, the response is sent to the instructor automatically.                                                                                                          |
| <b>123..</b>   | Numeric Value<br>                           | Once the numeric value is entered, press 'OK' (right function key) to transmit your answer.                                                                                                |
| <b>3,1,2..</b> | Multiple Response with Numeric Value<br>    | Once the multiple numeric values are entered, press 'OK' (right function key) to transmit your answer.                                                                                     |
| <b>C,A,B..</b> | Multiple Response with Alpha Characters<br> | Once the multiple alpha characters are entered, press 'OK' (right function key) to transmit your answer.                                                                                   |
| <b>txt</b>     | Short Answer Alphanumeric<br>               | Enter the alphanumeric text using cell phone texting (one key tap of the '7' key is '7', six key taps is 'S'. The period key is also the 'space' key). Press 'OK' to transmit your answer. |



### Other Messages:

| Message                                                                                                   | Comments                                                                                                                                                          |
|-----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Invalid Response<br>  | If you see this screen after sending a response, then it means that the response is invalid. For example, answer options are A-D and you submit E as your answer. |
| Incorrect Channel<br> | If you see this screen, then the ResponseCard NXT® is not on the correct channel or is unable to communicate with the instructor's receiver.                      |
| Polling Closed<br>    | If you see this screen, then the polling has been closed and answers are not being accepted.                                                                      |